


# Arrow Scroll Saw Pattern

Solid black line = cut line

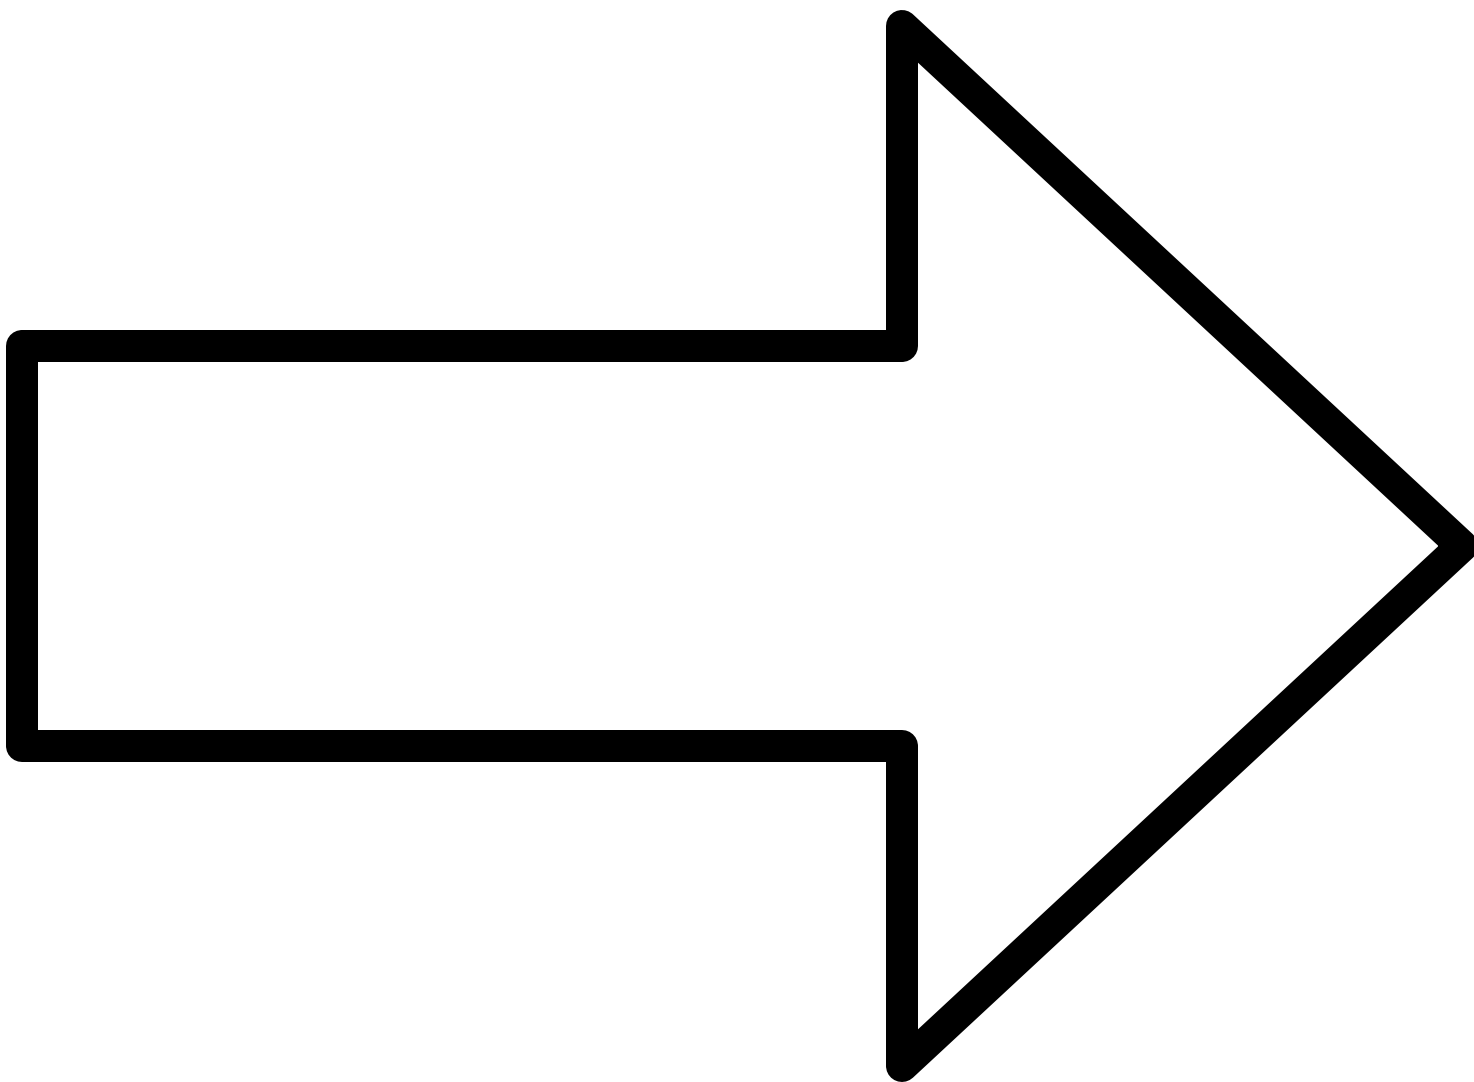

Transfer the cut line to stock; drill entry holes only where your project requires interior cuts.